

## GoodWe Global Sales & Service Network

### GoodWe (China)

No.189 Kunlunshan Rd., SND, Suzhou, 215163, China  
T: +86 512 6239 6771  
sales@goodwe.com  
service.chn@goodwe.com

### GoodWe (Italy)

No. 17 Via Galimberti, Biella 13900, Italy  
T: +39 (0) 15 4191921  
sales@goodwe.com  
service.it@goodwe.com

### GoodWe (India)

1202, G-Square Business Park, Sector 30A, Opp. Sanpada  
Railway Stn., Vashi, Navi Mumbai- 400703  
T: +91(0)9769 3475 60  
sales@goodwe.com  
service.in@goodwe.com

### GoodWe (Netherlands)

Franciscusdreef 42C, 3565AC Utrecht, the Netherlands  
T: +31 (0) 30 737 1140  
sales@goodwe.com  
service.nl@goodwe.com

### GoodWe (Brazil)

Rua Abelardo 45, Recife/PE, 52050-310  
T: +55 81 991239286  
sergio@goodwe.com  
servico.br@goodwe.com

### GoodWe (Portugal)

Fürstenrieder Str. 279a, 81377 München, Germany  
T: +34 661 584870  
sales@goodwe.com (Sales)  
servico.pt@goodwe.com (Service)

### GoodWe (Korea)

8F Invest Korea Plaza, 7 Heoleung-ro Seocho-gu Seoul  
Korea (06792)  
T: +82 (2) 3497 1066  
sales@goodwe.com  
Larry.Kim@goodwe.com

### GoodWe (Germany)

Fuerstenriederstr. 279A, 81377 Munich  
T: +49 (0) 800 998 1212  
sales@goodwe.com  
service.de@goodwe.com

### GoodWe (Australia)

Level 14, 380 St. Kilda Rd, Melbourne, VIC, 3004, Australia  
T: +61 3 9324 0559  
sales@goodwe.com  
service.au@goodwe.com

### GoodWe (UK)

6 Dunhams Court, Dunhams Lane,  
Letchworth Garden City, SG6 1WB UK  
T: +44 (0) 333 358 3184  
enquiries@goodwe.co.uk  
service@goodwe.co.uk

### GoodWe (Turkey)

Adalet Mah. Megapol Tower K: 9 No: 110 Bayraklı - Izmir  
T: +90 (232) 935 68 18  
info@goodwe.com.tr  
service@goodwe.com.tr

### GoodWe (Spain)

Fürstenrieder Str. 279a, 81377 München, Germany  
T: +34 661 584870  
sales@goodwe.com (Sales)  
soporte.es@goodwe.com (Service)

### GoodWe (South Africa)

Fürstenrieder Str. 279a, 81377 München, Germany  
T: +27 60 719 2956  
sales.africa@goodwe.com (Sales)  
service.africa@goodwe.com (Service)

### GoodWe (Mexico)

Oswaldo Sanchez Norte 3615, Col. Hidalgo, Monterrey,  
Nuevo Leon, Mexico, C.P.64290  
T: +52 1 81 2871 2871  
sales@goodwe.com  
soporte.ltam@goodwe.com

# GoodWe & PylonTech Force Battery Connection

ET/EH/BT/BH Series + Pylontech Force H1 & H2



Ver. 1.0

Updated on Sep 10th, 2020


www.goodwe.com

This is an instruction for quick installation of GoodWe HV series energy storage inverters (**ARM version 14 or higher**) and Pylontech Force H1 or H2 battery. For details of the connection or commissioning, please go to user manual of the inverter and the battery if you cannot find it in this instruction. Here we take GoodWe ET inverter and Pylontech Force H2 battery as an example for connection and commissioning.

## Precautions

A

Make sure battery and inverter are not damaged and battery breaker is turned off before making any further move

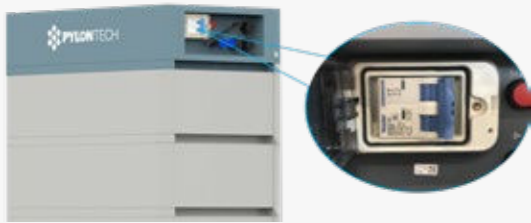

B

Get ready of the battery cable in the components box with Force H2 battery, and the connector sets in battery components box




## Power Cable Wiring


### Step 1: Make Battery cable

A. Use the power cable in battery components box. Cut the metal connectors from the cable and connect to the Phoenix connector in inverter components box.

**Note:** If you want replace the cable by your own, make sure the power cable dimension selected is 4~6mm<sup>2</sup>

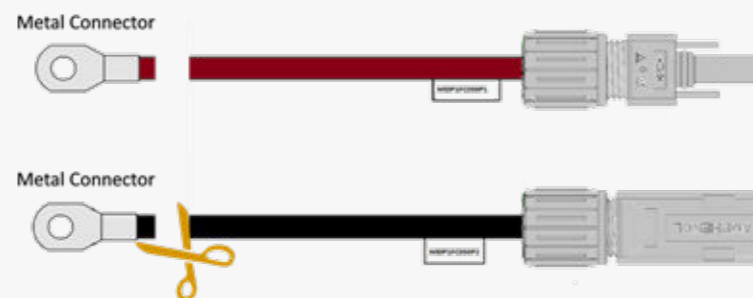


### Step 2: Connect the ready cable to inverter and battery

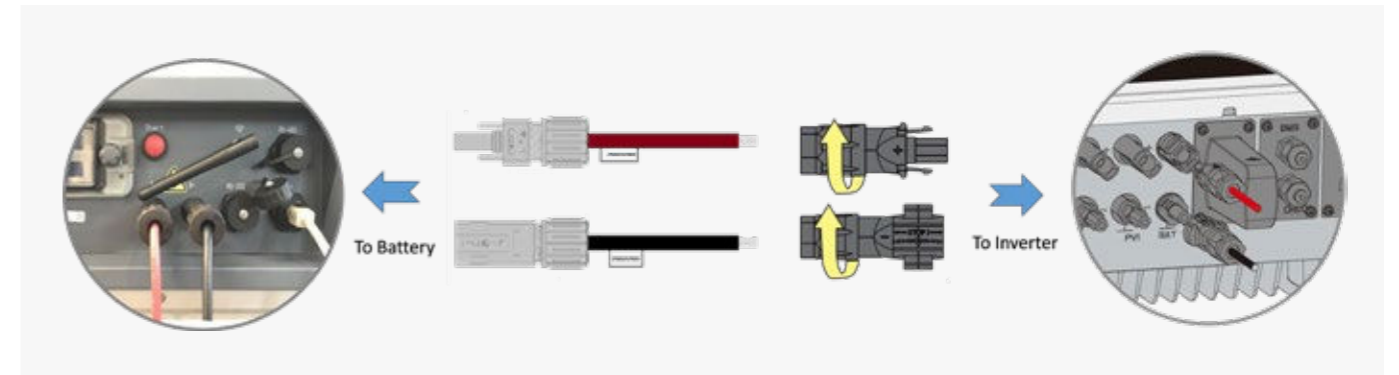

## Communication Cable Wiring


### Step 1: Make cables

A. Cut the CAN/RS485 cable attached in battery components bag, take out the gland to use later.

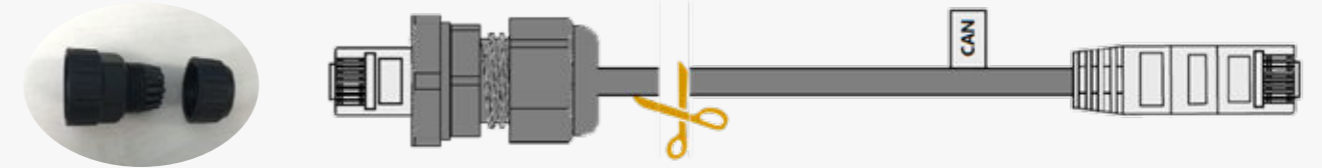


B. Cut off the RJ45 connector on the "To Battery" Cable attached on inverter.

**Note:** please note that you should leave enough cable length leading to battery.

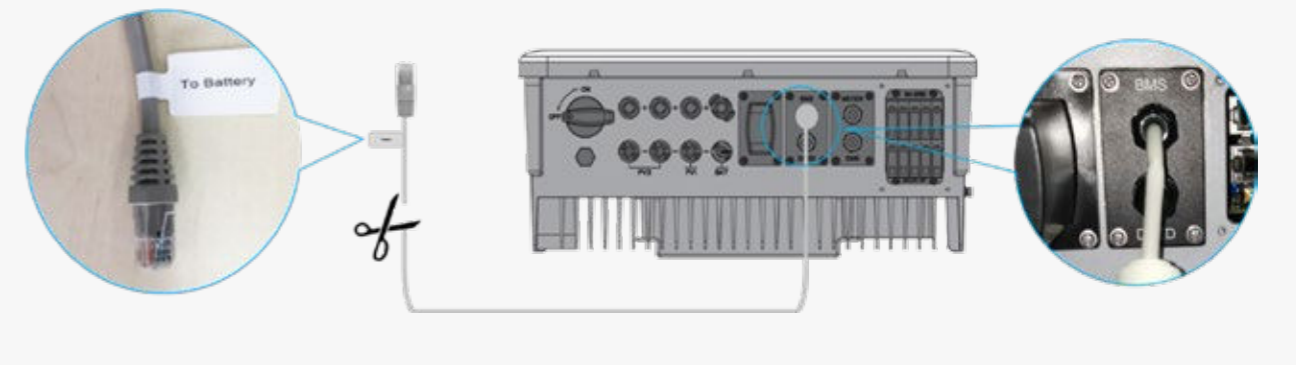

C. Put the rest of "To Battery" cable through the gland and then make a new RJ45 connector.

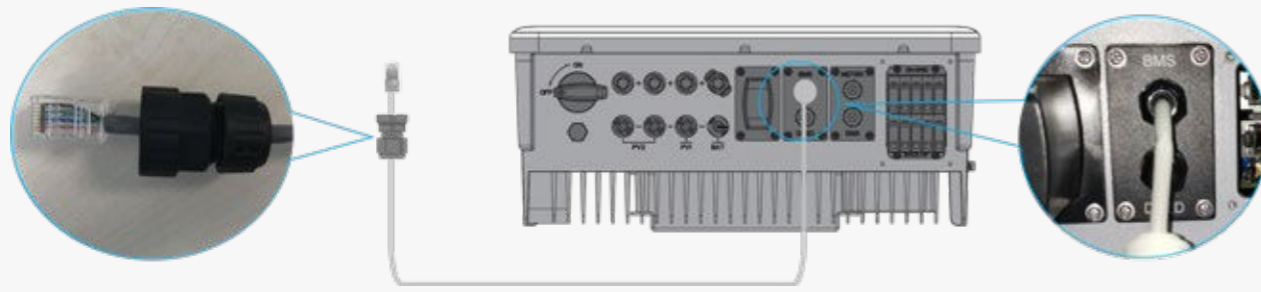


Note: please follow the pin sequence of the initial RJ45 connector or as below




Position	Color	BMS Function
1	Orange&white	485_A2
2	Orange	NC
3	Green&white	485_B2
4	Blue	CAN_H
5	Blue&white	CAN_L
6	Green	NC
7	Brown&white	NC
8	Brown	NC

D. Connect the new RJ45 cable to battery "CAN" port. And fasten the gland for water-proof.

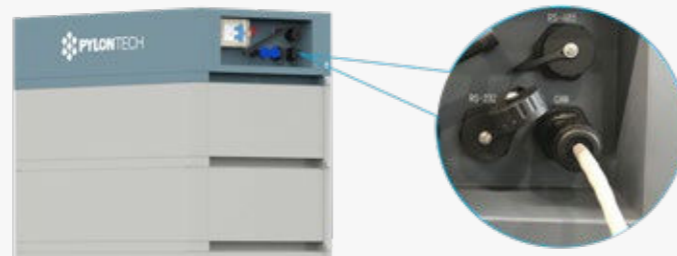


## Inverter Commissioning

A. Download and install PV Master on your smart phone and connect inverter via wireless

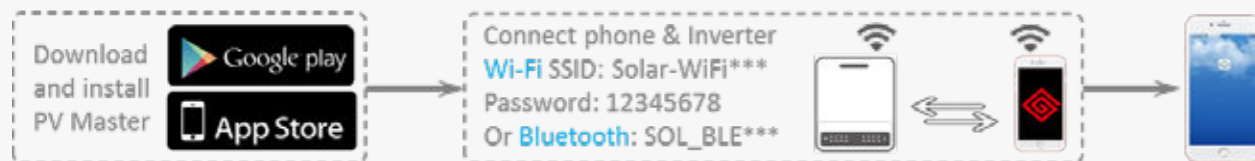

B. Select the right battery model in PV Master → Basic Setting

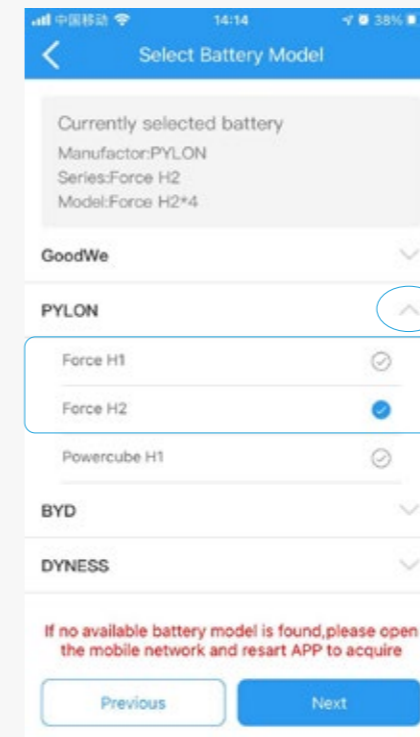

Click here to see all the compatible batteries with inverters

Note:

1. For detailed commissioning of the system on GoodWe storage inverter, please follow GoodWe PV Master User Manual.
2. Wrong commissioning will cause BMS communication failure.

After the wiring and commissioning is completed, start battery and inverter up.